


Non-Sterile Cleanroom Gowning Procedure

Step 1: Pre-entry




Bouffant/Hair Net
Be sure to contain all hair.

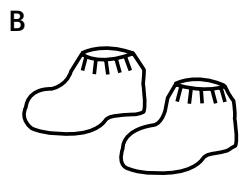

Shoe Covers
Contain all laces and tassels.




Step 2: Gowning

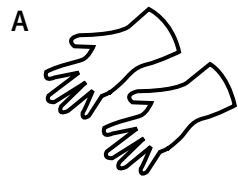

Gowning Gloves
Recommended for Class 100 and better.



Mask
Worn under hood.
Bend nosepiece first for a snug facial fit.

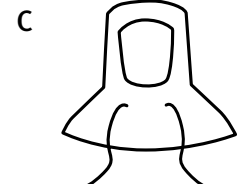


Hood
Ensure snug fit and proper face/neck seal.




Step 3

Coverall
Step into the coverall.
Be sure sleeves and upper garment do not touch bench or floor.
Tuck shoulder panels from hood inside coverall before zipping up.

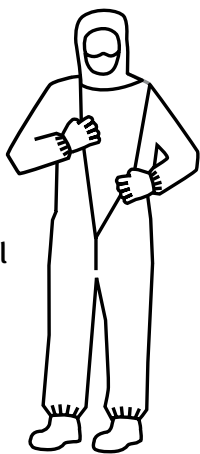


Step 4

Boot Covers
Put on boots and pull boots (high-top shoe covers) over legs of coverall.

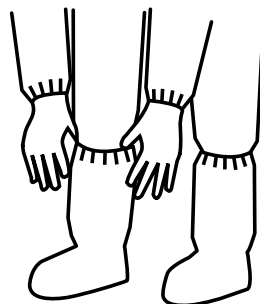


Step 5

Goggles
Wear goggles/safety glasses when eye protection or additional particulate control is desired.

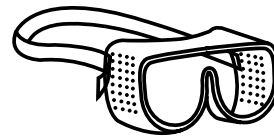

Step 6

Second Sterile Gloves (optional)
For maximum particulate protection, place hem of glove over cuff of sleeve.


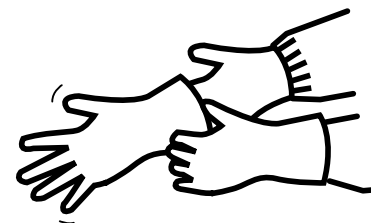


Non-Sterile Cleanroom Gowning Removal Procedure


Step 1: In order




Gloves
If two pairs of gloves are worn, remove top pair of gloves then discard.

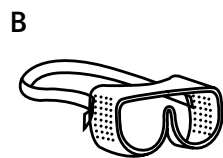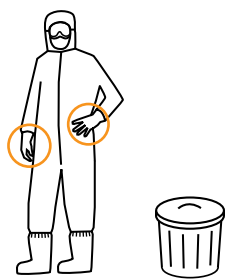



Goggles/Safety Glasses
Remove and properly contain.

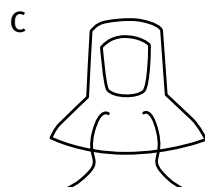


Hood
Hang in controlled environment.

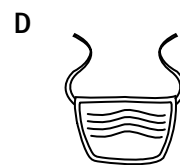

Mask
Remove and usually discard.

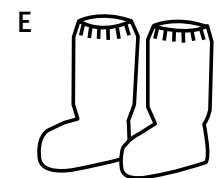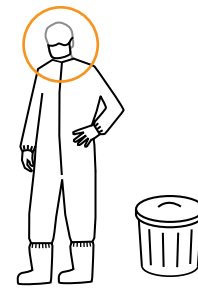


Boot Covers
Usually discard after each change.

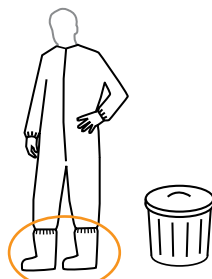


Step 2


Coverall
If coverall is to be used again, either hang it in a controlled environment or prepare for storage.

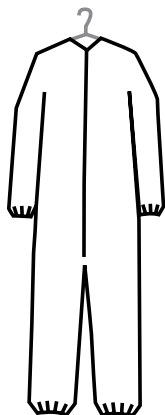


Step 3

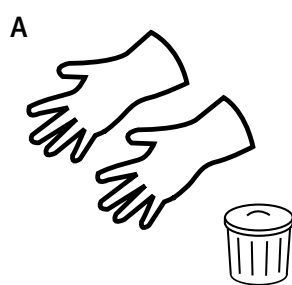

Gloves
It is recommended that gloves be discarded after each change.

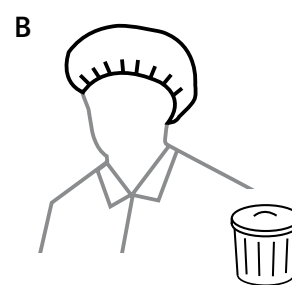

Bouffant/Hair Net
Usually discard after each change.

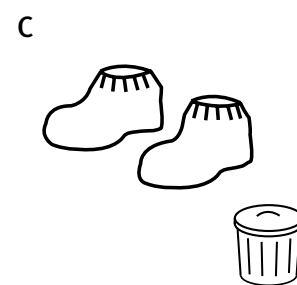


Shoe Covers
Usually discard after each change.

Sterile Cleanroom Gowning Procedure

Step 1: Pre-entry




Bouffant/Hair Net
Be sure to contain all hair.

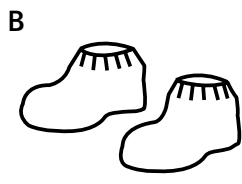

Shoe Covers
Contain all laces and tassels.



Step 2: Gowning

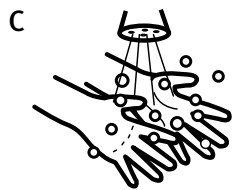


Wash hands using bactericidal soap and dry thoroughly.




First Sterile Gloves
Follow aseptic technique by touching only the inside of gloves. Sanitize.




Sanitize gloves after donning each article, if required.

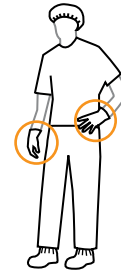

Step 3

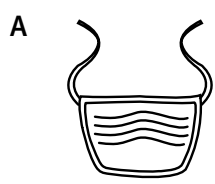

Mask
Adjust for a snug facial fit.

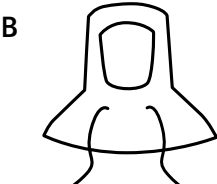

Hood
Ensure snug fit and proper neck seal.




Step 4



A Coverall
Carefully remove coverall from package by holding the inside neck area.

Unfold garment while preventing it from touching the floor, your clothes or bench.

Please exercise care when inserting leg to ensure donning snaps (if used) release and foot clears elastic ankle prior to transferring weight.

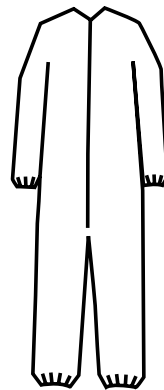


B Don using aseptic technique.

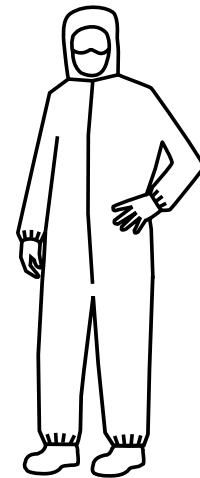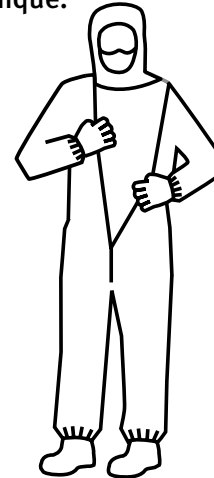

Step 5

A Boot Covers
Put boots (high-top shoe covers) on using aseptic technique. Tuck coverall legs into boots.

The first boot donned can now be placed in the "clean" side of gowning area.

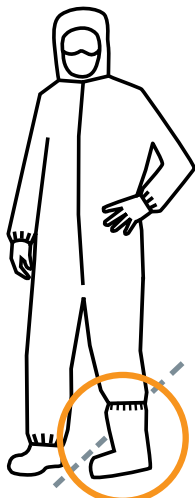

B Don second boot and place the other foot in the "clean" side of the gowning area.




Step 6

A Goggles
Adjust for a snug facial fit.



B Second Sterile Gloves
Complete gowning steps by aseptically donning second pair of sterile gloves over the first pair, making sure the cuffs are securely over the sleeves.

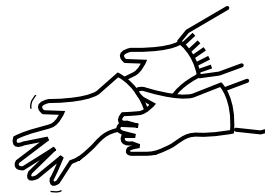

C Perform a final inspection in gowning room mirror prior to entry into the sterile cleanroom.




Sterile Cleanroom Gowning Removal Procedure

Removal of Sterile Garments


Enter gowning area from cleanroom and head directly to the "exit gown room" (preferred method).

If no "exit gown room" is available, go directly to the "non-clean" side, usually divided by a bench and/or line.


Remove items in reverse order of gowning procedure and discard.

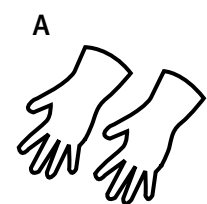

Outer Gloves

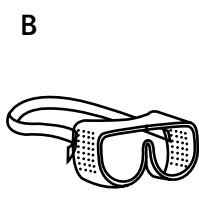

Goggles

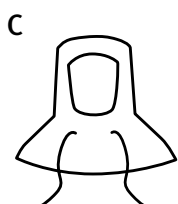


Hood




Mask




Boot Covers

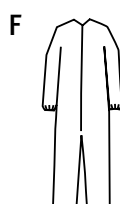


Coveralls

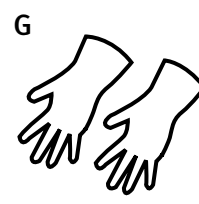

Inner Gloves

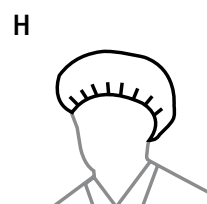

Bouffant/Hair Net

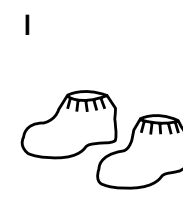

Shoe Covers

Customer Service: 1-800-931-3456
www.PersonalProtection.DuPont.com

These are recommendations only. Gowning procedures may vary by protocol or company procedures.

Copyright © 2009 DuPont. The DuPont Oval Logo and The miracles of science™ are trademarks or registered trademarks of E.I. du Pont de Nemours and Company or its affiliates. All rights reserved.

H-93118-1 6/09

DuPont Contamination Control



The miracles of science™